



Fuses cabin V362 - V452T HD



Fuse 1	Fuse 4	Fuse 7	Fuse 10
Fuse 2	Fuse 5	Fuse 8	Fuse 11
Fuse 3	Fuse 6	Fuse 9	Fuse 12

Fuse	Description NL	Description EN
1	Interieur licht 10A	Interior light 10A
2	Radio 10A	Radio 10A
3	Radio 10A	Radio 10A
4	Schakelaar 15A (optie)	Switch 15A (option)
5	Schakelaar 15A (optie)	Switch 15A (option)
6	Ruitenwisser voor 15A	Windscreen wiper front 15A
7	Ruitenwisser achter 15A	Windscreen wiper rear 15A
8	Werklamp achter 15A	Work lights rear 15A
9	Werklamp voor 15A	Work lights front 15A
10	+12V AUX 10A	+12V AUX 10A
11	Kachel 10A	Heater 10A
12	Spare	Spare



Fuses cabin V4502T - V6004T



Fuse 3	Fuse 6	Fuse 9	Fuse 12
Fuse 2	Fuse 5	Fuse 8	Fuse 11
Fuse 1	Fuse 4	Fuse 7	Fuse 10

Fuse nr	Description NL	Description EN
1	Interieur licht 10A	Interior light 10A
2	Radio 10A	Radio 10A
3	Radio 10A	Radio 10A
4	Schakelaar 15A (optie)	Switch 15A (option)
5	Schakelaar 15A (optie)	Switch 15A (option)
6	Ruitenwisser voor 15A	Windscreen wiper front 15A
7	Ruitenwisser achter 15A	Windscreen wiper rear 15A
8	Werklamp achter 15A	Work lights rear 15A
9	Werklamp voor 15A	Work lights front 15A
10	+12V AUX 10A	+12V AUX 10A
11	Kachel 10A	Heater 10A
12	Spare	Spare



Fuses cabin V6004 Tele



Fuse 1	Fuse 2	Fuse 3	Fuse 4
Fuse 5	Fuse 6	Fuse 7	Fuse 8
Fuse 9	Fuse 10	Fuse 11	Fuse 12

Fuse	Description NL	Description EN
1	Voorbord hoek Sensor 10A	Front attachment safety sensor 10A
2	Spare 10A	Spare 10A
3	Voorbord vergrendeling 10A	Lock front attachment 10A
4	Joystick 10A	Joystick 10A
5	Last moment indicator 10A	Load moment indicator 10A
6	Spare 10A	Spare 10A
7		
8		
9		
10		
11		
12		